



Instruction No. 3

Installation of Stabilizer L.H. or R.H.

1. If this Stabilizer is to be installed on Ships 1-307, the short flexible shaft (Item 1502) extending from this Stabilizer must be removed by access to the gear box in the rear of the Stabilizer. This short flexible shaft must be replaced by the Trim Tab Rod (Item 1327) which can be removed from your old Stabilizer. When this old type rod is installed on the new stabilizer, it becomes interchangeable with the old type elevator installed on Ships 1-307.
2. If this Stabilizer is to be installed on Ships 308 and up, no interchangeability problem is involved.