
Seabee



Service News

REPUBLIC AVIATION CORPORATION
FARMINGDALE, LONG ISLAND, NEW YORK
• • • SERVICE DEPARTMENT • • •

December 20, 1947


No. 7A

This sheet replaces No. 7 dated December 16, 1946

WATER TOWING

If you wish to tow a Seabee on water, use a $\frac{3}{4}$ inch or 1 inch rope tied around the main landing gear cross tube where it protrudes on each side of the hull. It is also advisable to have someone remain in the cabin to help guide the Seabee by use of the water rudder.

Do not tow your Seabee by the bow-mooring cleat. This cleat is not intended to take heavy loads, which are incurred by water towing. Its only function is to moor the Seabee and prevent drifting due to tide or normal breeze.

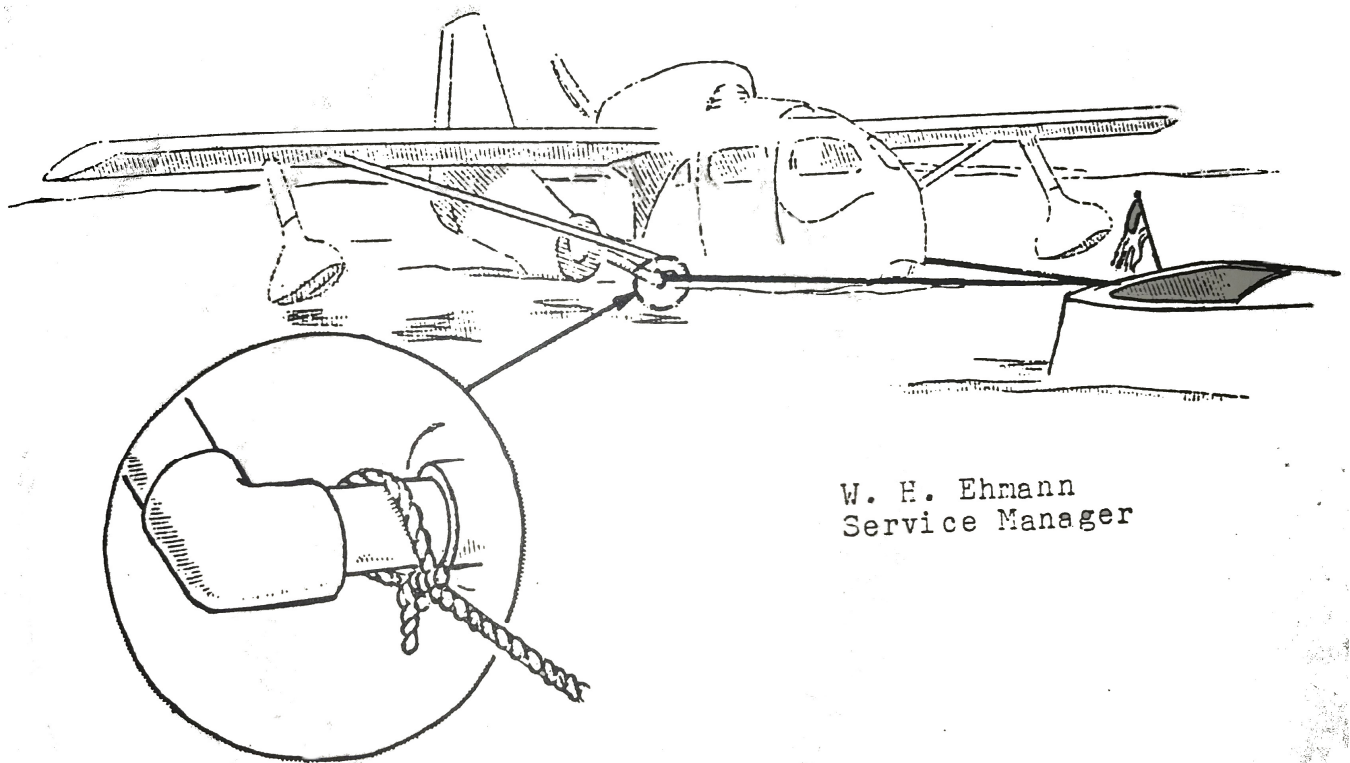

W. H. Ehmann
Service Manager